


XP SERIES

LVC500

LUMBER JACK


Original Manual Vacuum Cleaner

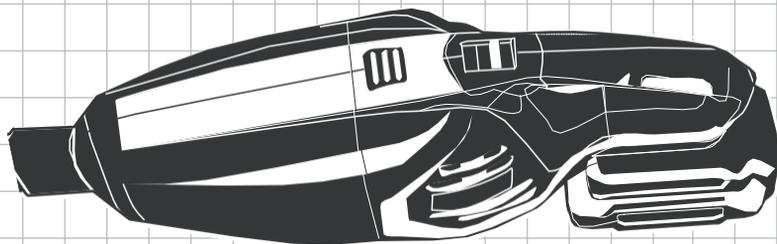

WARNING

Read this manual before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.



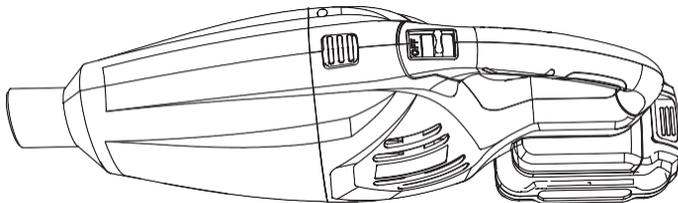

INDEX

LVC500

1. Power tool safety
 2. Personal Safety
 - 3 – 5. Battery Tool use and care
 - 6 – 7. Product Features
 8. Assembly
 - 9 – 10. Maintenance and service
 11. Disposal
 12. Declaration
-

General Power Tool Safety Warnings

⚠ WARNING : Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term " power tool " in the warnings refers to your mains-operated (corded) power tools or battery-operated (cordless) power tools.

1. Work Area Safety

- a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. Electrical Safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way.** Do not use any adapter plugs with grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. **Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of a RCD reduces the risk of electric shock.

⚠ NOTE :The term residual current device (RCD) may be replaced by the term ground fault circuit interrupter (GFCI) or earth leakage circuit breaker (ELCB).

3. Personal Safety

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

4. Power Tool Use and Care

- a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing

power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e. Maintain power tools. Check for misalignment or binding of moving parts, break- age of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

5. Battery tool use and care

a. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

e. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

f. Always push the gear selector and turn the operating mode selector switch through to the stop. Otherwise, the machine can become damaged.

g. Apply the power tool to the screw only when it is switched off. Rotating tool

inserts can slip off. An auxiliary tool can be used to remove the screwdriver bit or universal bit holder.

h. Working in especially dusty environments can lead to failure of the power tool. If the power tool suddenly fails, remove the carbon brushes and check them.

i. Do not open the battery. Protect the battery against heat, continuous intense sunlight, fire, water, and moisture. Take care of danger of explosion and short-circuiting.

⚠ WARNING : Do not vacuum materials that are harmful to one's health, e. g. dust from beech or oak wood, masonry dust, asbestos. These materials are considered carcinogenic.

Inform yourself about the valid regulations/laws for your country concerning the handling of materials that are hazardous to one's health.

⚠ WARNING : Use the vacuum cleaner only when you fully understand and can perform all functions without limitation, or have received appropriate instructions. A thorough introduction reduces operating errors and injuries. **This vacuum cleaner is not intended for use by children and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.** Otherwise, there is danger of operating errors and injuries.

Supervise children. This will ensure that children do not play with the vacuum cleaner.

Cleaning and user maintenance of the vacuum cleaner shall not be made by children without supervision.

⚠ WARNING : The vacuum cleaner is suitable only for vacuuming dry materials. The penetration of liquids increases the risk of an electric shock.

⚠ WARNING : The vacuum cleaner may only be used and stored indoors. The penetration of rain or moisture into the vacuum cleaner lid increases the risk of an electric shock.

⚠ WARNING : Do not vacuum hot or burning dusts, and in rooms with an explosion hazard.

Dusts can ignite or explode.

Remove the battery pack from the vacuum cleaner before maintaining or cleaning, making any adjustments, changing accessories or placing the vacuum cleaner aside. This safety measure prevents accidental starting of the vacuum cleaner.

Provide for good ventilation at the working place.

Have the vacuum cleaner repaired only through qualified specialists and

only using original spare parts. This ensures that the safety of your vacuum cleaner is maintained.

Do not clean the vacuum cleaner with a water jet pointed directly at it. The penetration of water into the vacuum cleaner lid increases the risk of an electric shock.

When the vacuum cleaner is not in use, store it securely. The storage place must be dry and lockable. This prevents the vacuum cleaner being damaged when it is stored or being used by inexperienced people.

Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

6. Symbols

a. Some of the following symbols may appear on this product. Study these symbols and learn their meanings. Proper interpretation of these symbols will allow for more efficient and safer operation of this product.

SYMBOL	DESCRIPTION
	Read the manual before set-up and/or use.
	Wear safety glasses, ear protection and respiratory protection.
	Use dust mask. Dust which is injurious to health can be generated when working on wood and other materials. Never use the device to work on any materials containing asbestos.
	Do not dispose with house-hold waste.
	Conforms to relevant safety standards.

Product Description and Specifications

Intended Use

The vacuum cleaner is intended for the use of vacuuming materials that are not

Harmful to one's health.

The vacuum cleaner may only be used and stored indoors.

The vacuum cleaner can also be used for commercial purposes, e.g. in hotels, schools, factories, shops, offices and rental businesses.




Use the vacuum cleaner only when you fully understand and can perform all functions without limitation, or have received appropriate instructions.

Product Features

The numbering of the product features refers to the illustration of the vacuum cleaner on the graphics page.






Release button for dust cup

1. On/ Off switch
2. Soft grip
3. Battery pack*
4. Motor housing
5. Dust cup
6. Battery unlocking button
7. Filter assembly
8. Filter cover
9. Filter seal
10. Fabric filter
11. Filter basket

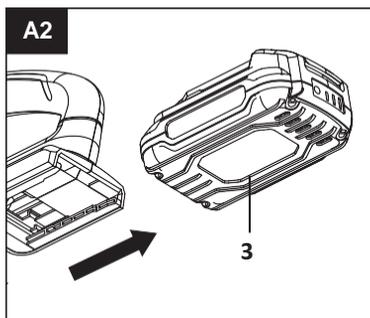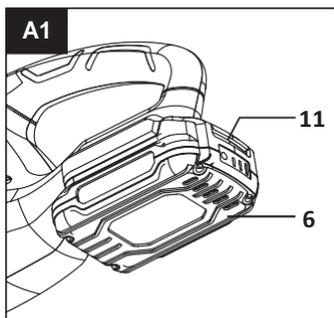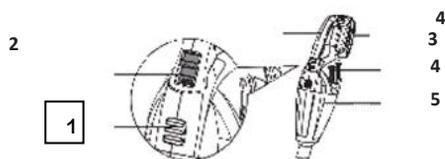



Portable vacuum cleaner
Owner's Manual & Safety Instructions

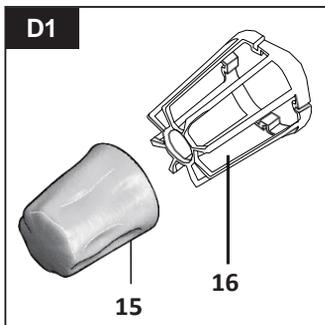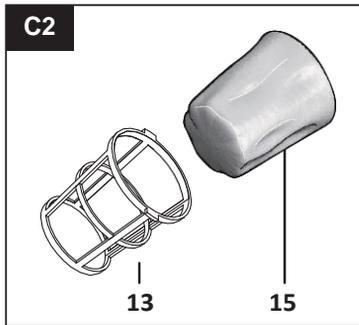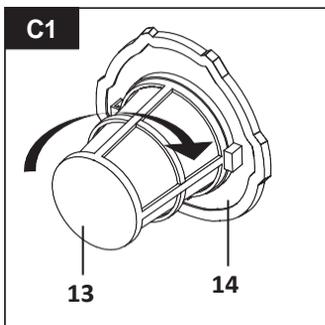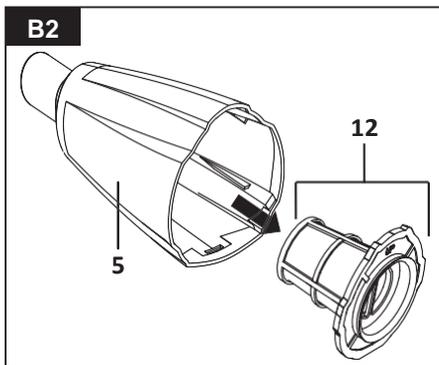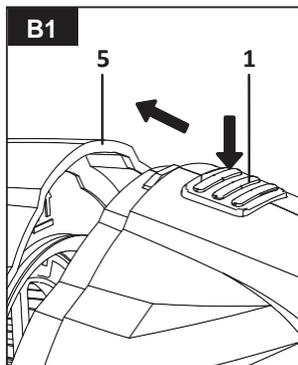

Assembly

Installing the Battery

Press the unlock button of the battery, and then insert the machine away from the battery. Push the battery completely into the base until the stripe can no longer be seen and the battery is securely locked.

⚠ NOTE : Use only original batteries with the voltage listed on the nameplate

of your power tool. Using other batteries can lead to injuries and pose a fire hazard.

Removing the Battery

Press the button of the battery, and then pull the charged battery from the front

⚠ WARNING into the base of the power tool.

Mounting VAC Accessories

: Remove the battery pack from the vacuum cleaner before maintaining or cleaning, making any adjustments, changing accessories or placing the vacuum cleaner aside. This safety measure prevents accidental starting of the vacuum cleaner.

⚠ NOTE – Connect the vacuum cleaner accessories firmly to the connection at the dust cup and in to each other.

: The vacuum cleaner accessories can be connected directly to the dust cup.

The combination possibilities of the various vacuum cleaner accessories can be viewed in the figure.

⚠ WARNING Operation

: Remove the battery pack from the vacuum cleaner before maintaining or cleaning, making any adjustments, changing accessories or placing the vacuum cleaner aside.

This safety measure prevents accidental starting of the vacuum cleaner.

Starting Operation

Before vacuuming, ensure that the filter assembly is assembled securely.

Only use an undamaged filter (no cracks, small holes, etc.). Replace a damaged Filter immediately.

⚠ NOTE Switching On and Off

: To save energy, only switch the vacuum cleaner on when using it.

– To **switch on** the vacuum cleaner, move the On/Off switch forwards (direction **ON**).

– To **switch off** the vacuum cleaner, move the On/Off switch backwards (direction **OFF**).

Maintenance and Service

Maintenance and Cleaning

Remove the battery pack from the vacuum cleaner before maintaining or cleaning, making any adjustments, changing accessories or placing the vacuum cleaner aside. This safety measure prevents accidental starting of the vacuum cleaner.

For safe and proper working, always keep the vacuum cleaner and ventilation slots clean.

- Clean the vacuum cleaner housing from time to time using a moist cloth.
- Clean soiled charger contacts using a dry cloth.

Cleaning the Dust Cup

To maintain the optimum performance of the vacuum cleaner, clean the dust cup after each use.

- Press release button and remove the dust cup from the motor housing.

Remove the filter assembly from the dust cup.

- Shake/tap out the dust cup over a suitable waste bin.

- If required, clean the dust cup with a moist cloth.

If required, clean the filter assembly (see “Cleaning the Filter Assembly”).

- Reinsert the filter assembly into the dust cup.

Afterwards, hang the dust cup at the bottom into the motor housing, apply light pressure until the dust cup can be heard to engage.

Cleaning the Filter Assembly

- Press release button and remove the dust cup from the motor housing.

Remove the filter assembly from the dust cup.

- Remove the filter cover from the filter seal.

- Remove the fabric filter along with its filter basket and brush down the fabric filter with a soft brush.

- If necessary, you can wet clean the fabric filter:

Remove the fabric filter from the filter basket and wash both parts under running water.

Then squeeze out the fabric filter and allow the fabric filter and filter basket to dry well in order to avoid the formation of mold.

- Assembly is carried out in reverse order.

Malfunctions

In the case of insufficient vacuuming performance, check the following:

- Is the dust cup full?
- ▷ See “Cleaning the Dust Cup” .
- Is the fabric filter clogged with dust?
- ▷ See “Cleaning the Filter Assembly” .
- Is the capacity of the battery pack too low?
- ▷ See “Battery Charging” .

Regular emptying of the dust cup and cleaning of the filter assembly ensures optimal vacuum capacity.

If the vacuuming performance is not achieved thereafter, take the vacuum cleaner to customer service.

6. Transport

The contained lithium ion batteries are subject to the Dangerous Goods Legislation requirements. The user can transport the batteries by road without further requirements.


When being transported by third parties (e.g.: air transport or forwarding agency), special requirements on packaging and label must be observed. For preparation of the item being shipped, consulting an expert for hazardous material is required.

7. Disposal

 Vacuum cleaners, battery packs, accessories and packaging should be sorted for environmental-friendly recycling.

Do not dispose of vacuum cleaners and battery packs/batteries into household waste!

Battery packs/batteries:

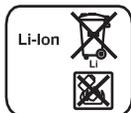

Li-ion:

Please observe the instructions in section Transport.

CE DECLARATION OF CONFORMITY

TOOLSAVE

Unit C, Manders Ind. Est.,

Old Heath Road, Wolverhampton,

WV1 2RP.

Tel: 01902 450 470

EC DECLARATION OF CONFORMITY

Certificate for EC-type examination delivered by Interk Testing Services Hangzhou 16

No. 1 Ave., Xiasha Economic Development District, Hangzhou 310018, China

(Verification No.:150500566HZH-V1)

Person who declares: Bill Evans




01.05.2016

The Director

LUMBER

JACK

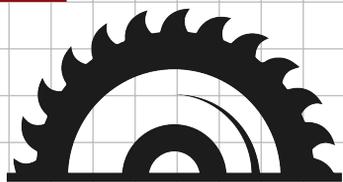

UNIT C
MANDERS INDUSTRIAL ESTATE,
OLD HEATH ROAD,
WOLVERHAMPTON

www.Lumberjacktools.co.uk